



Illustrated Parts List

Model Series

49M800

TYPE NUMBERS
0046, 0047.


TABLE OF CONTENTS

Air Cleaner	6
Alternators	8
Blower Housing/Shrouds	6
Camshaft	3
Carburetor	5
Controls	7
Crankshaft	3
Cylinder	2
Cylinder Head	4
Electric Starter	7
Engine Sump	2
Flywheel	7
Fuel Supply	5
Ignition	8
Gasket Set - Engine	2
Gasket Set - Valve	4
Lubrication	3
Kit-Carburetor Overhaul	5
Piston, Rings, Connecting Rod	3
Valves	4



PRINTED IN U.S.A.

 COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.




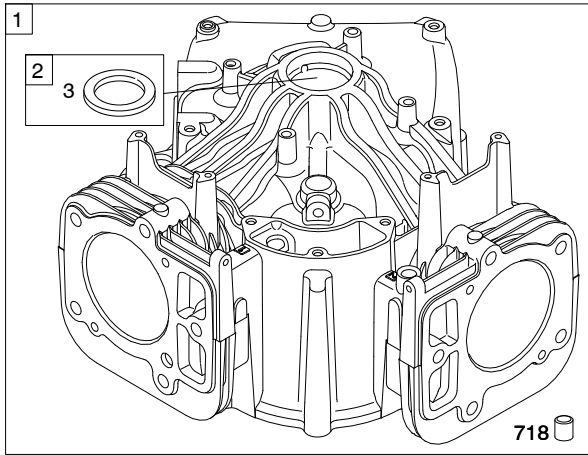







1319 WARNING LABEL

WARNING
 Read and follow operating instructions before using engine.
 Use only in ventilated areas. Never use in enclosed spaces. Always use proper ventilation.
 Do not use in areas with flammable vapors or gases.
 Do not use in areas with high humidity.
 Do not use in areas with high temperature.
 Do not use in areas with high noise levels.
 Do not use in areas with high vibration levels.
 Do not use in areas with high electromagnetic interference levels.


REQUIRED when replacing parts with warning labels affixed.

         
1058 OPERATOR'S MANUAL

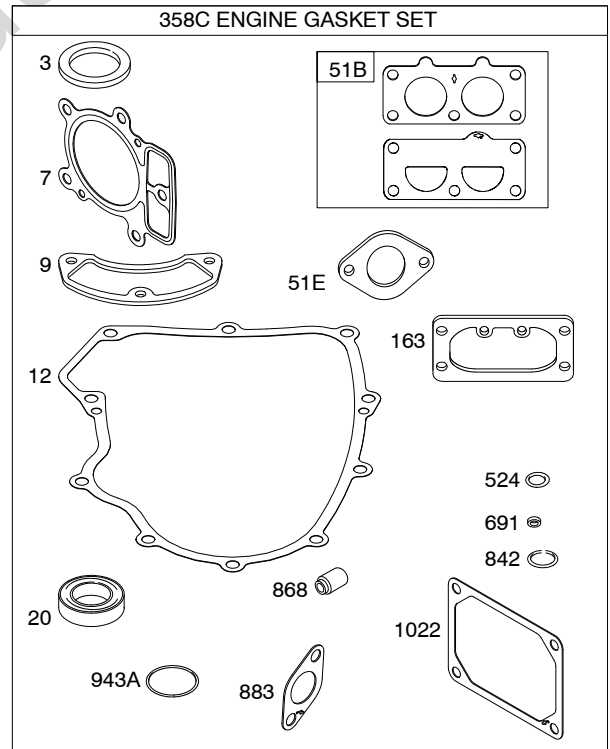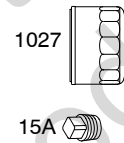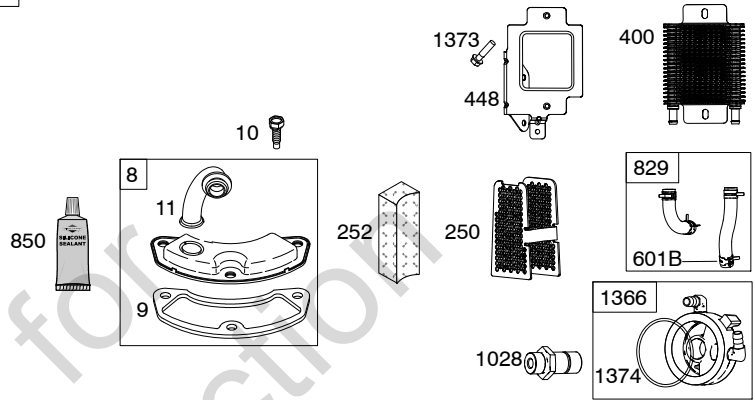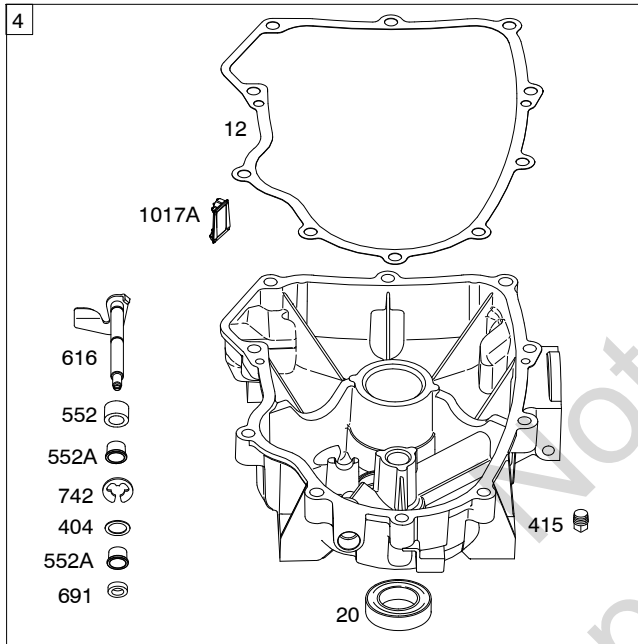


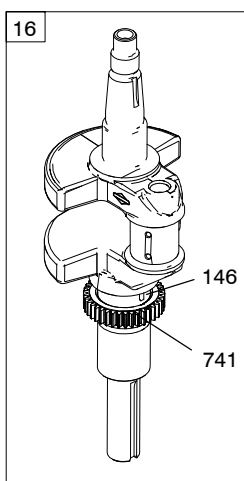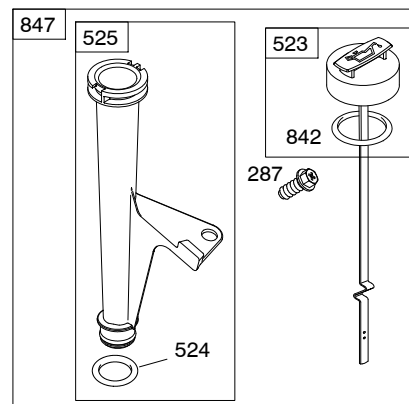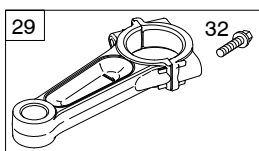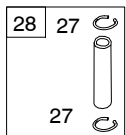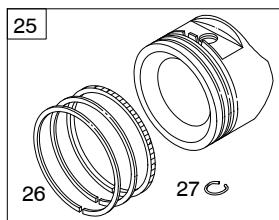

24


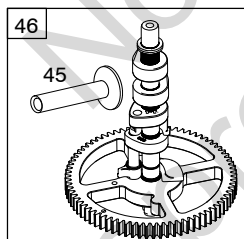 


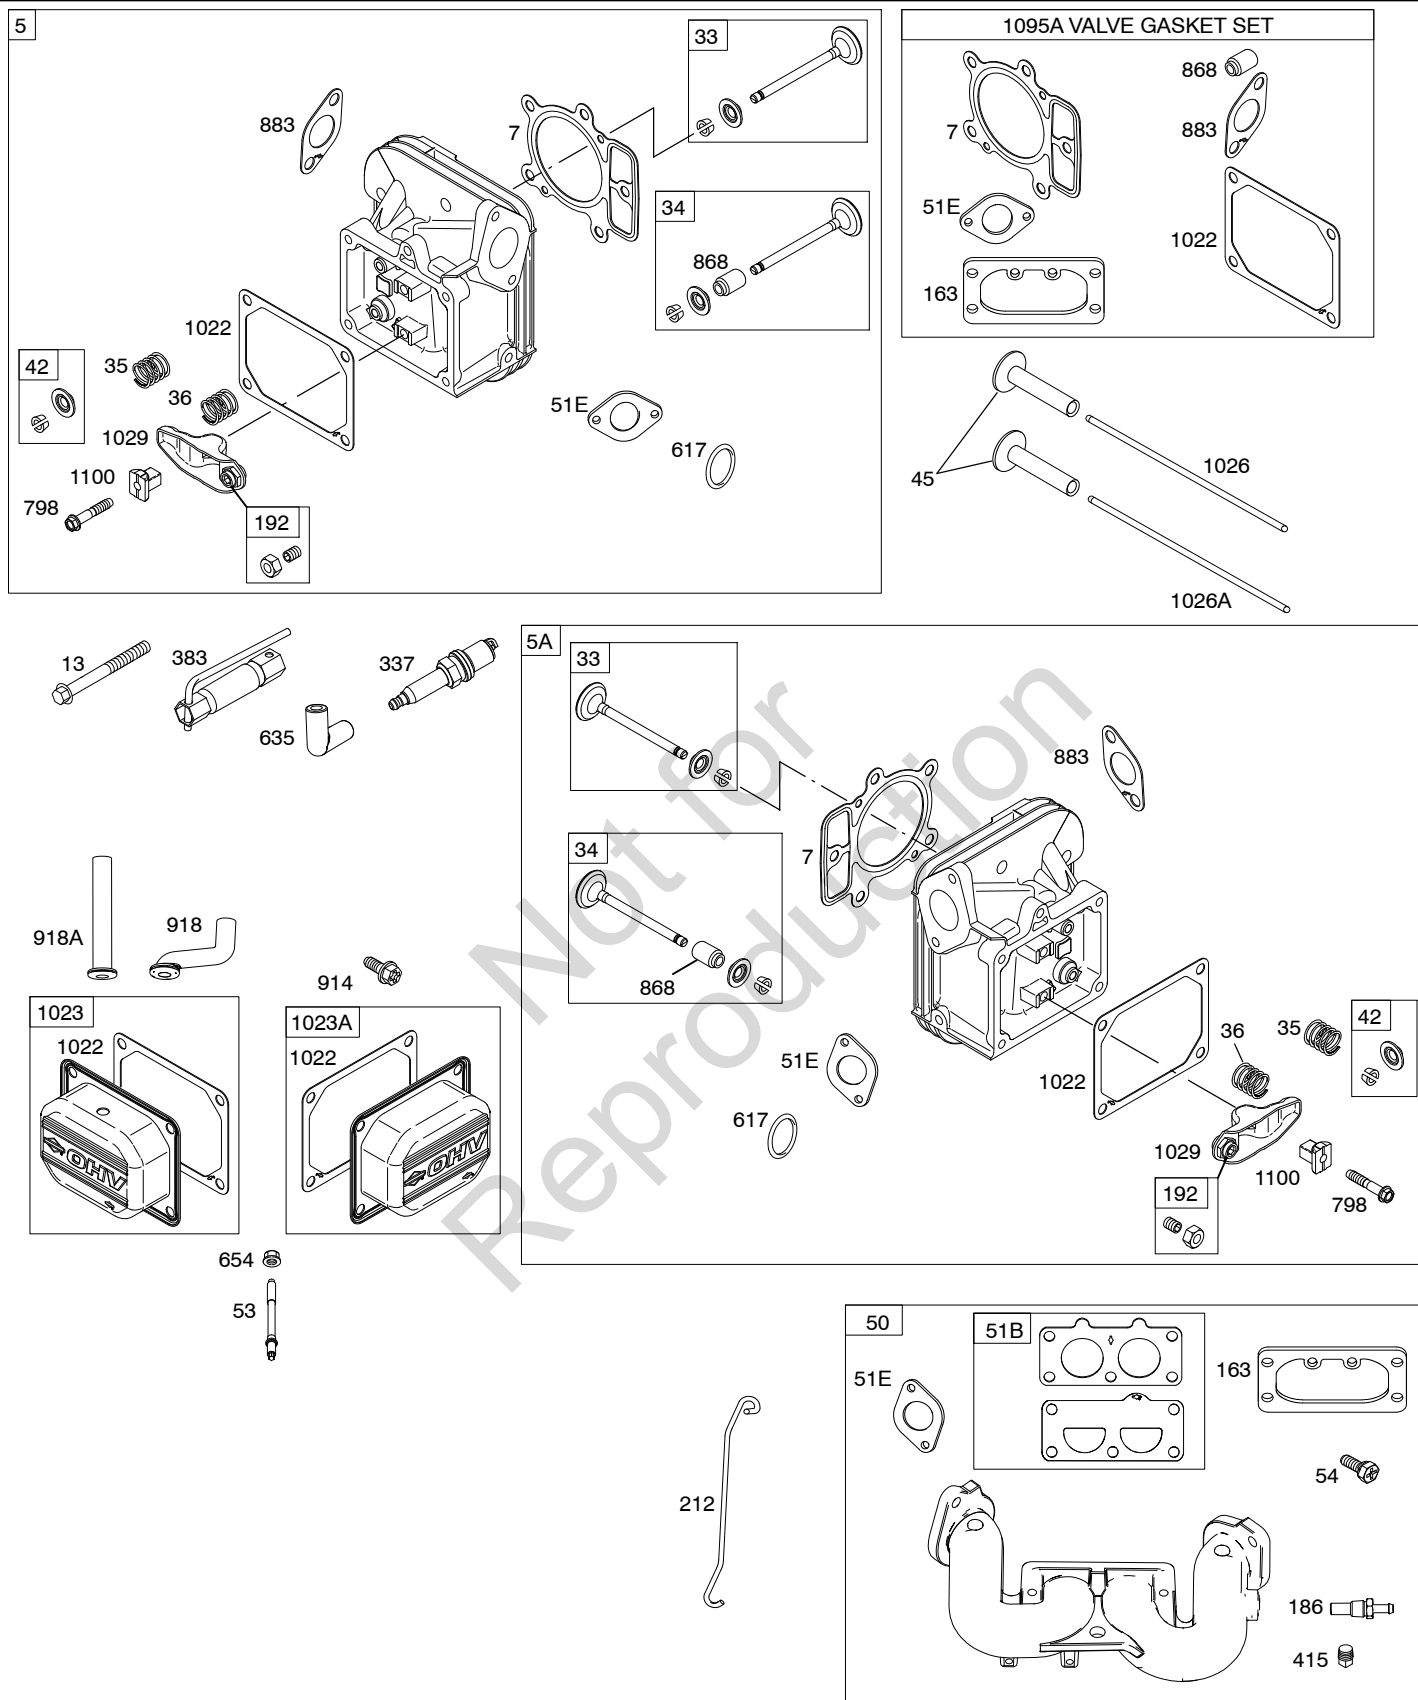 


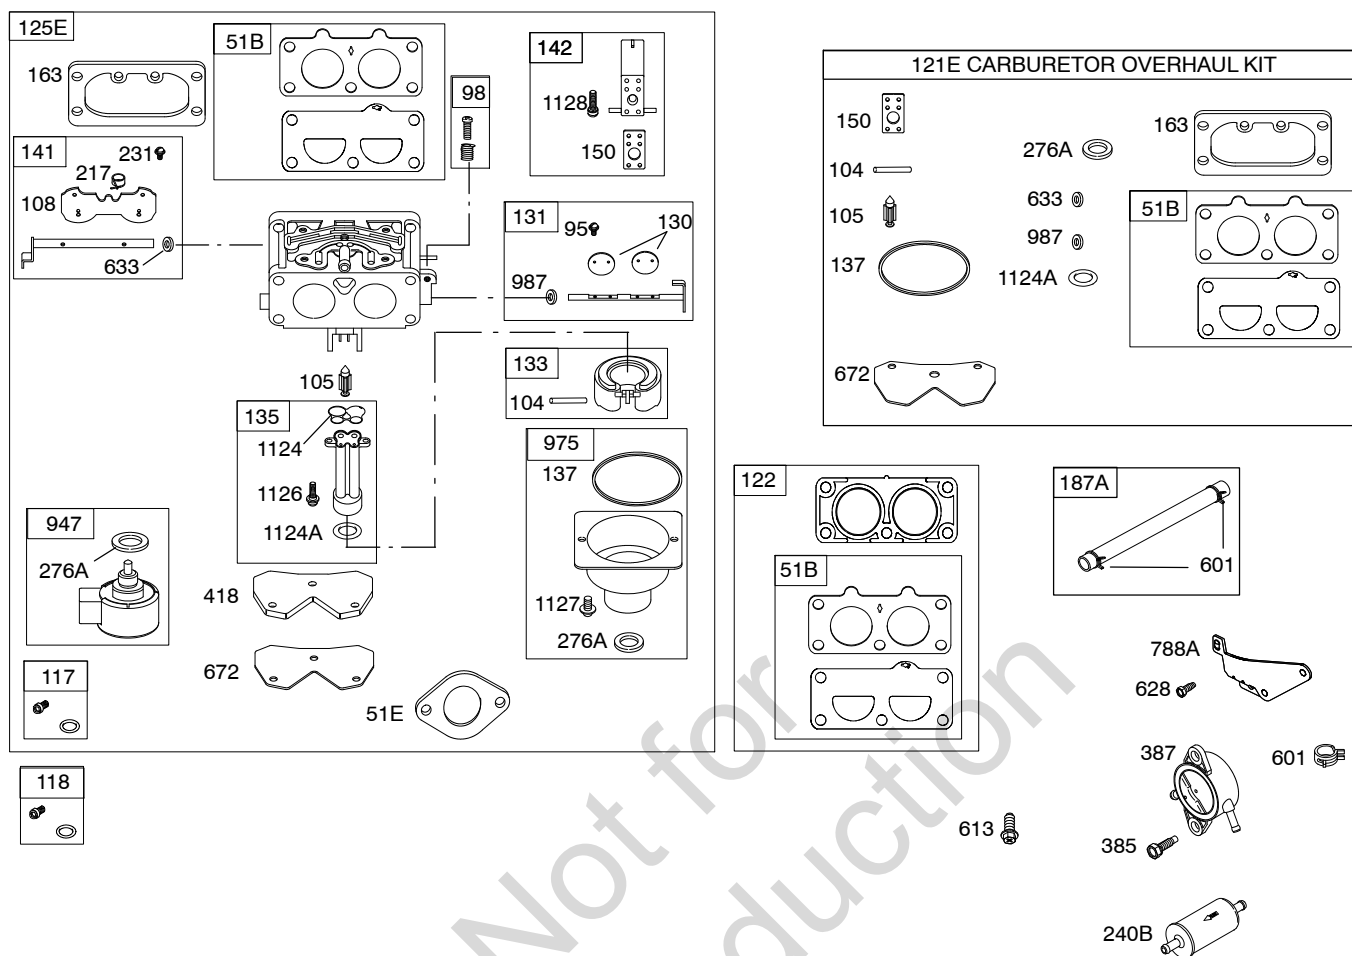 



Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

 
 
49M800

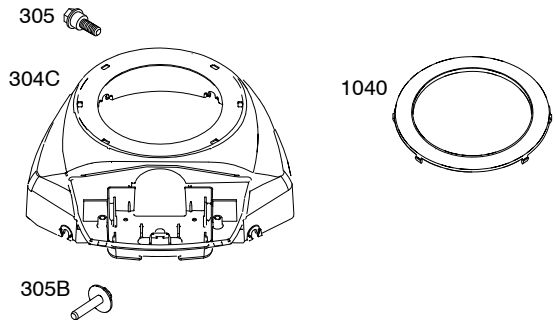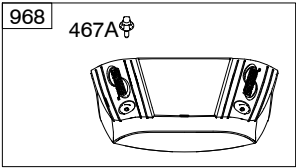

1036 EMISSIONS LABEL






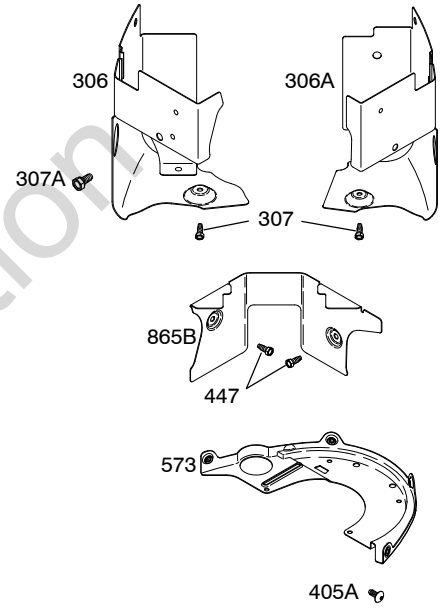 
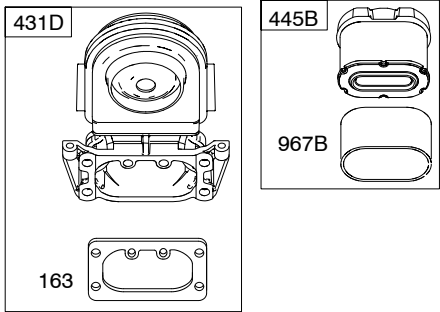 


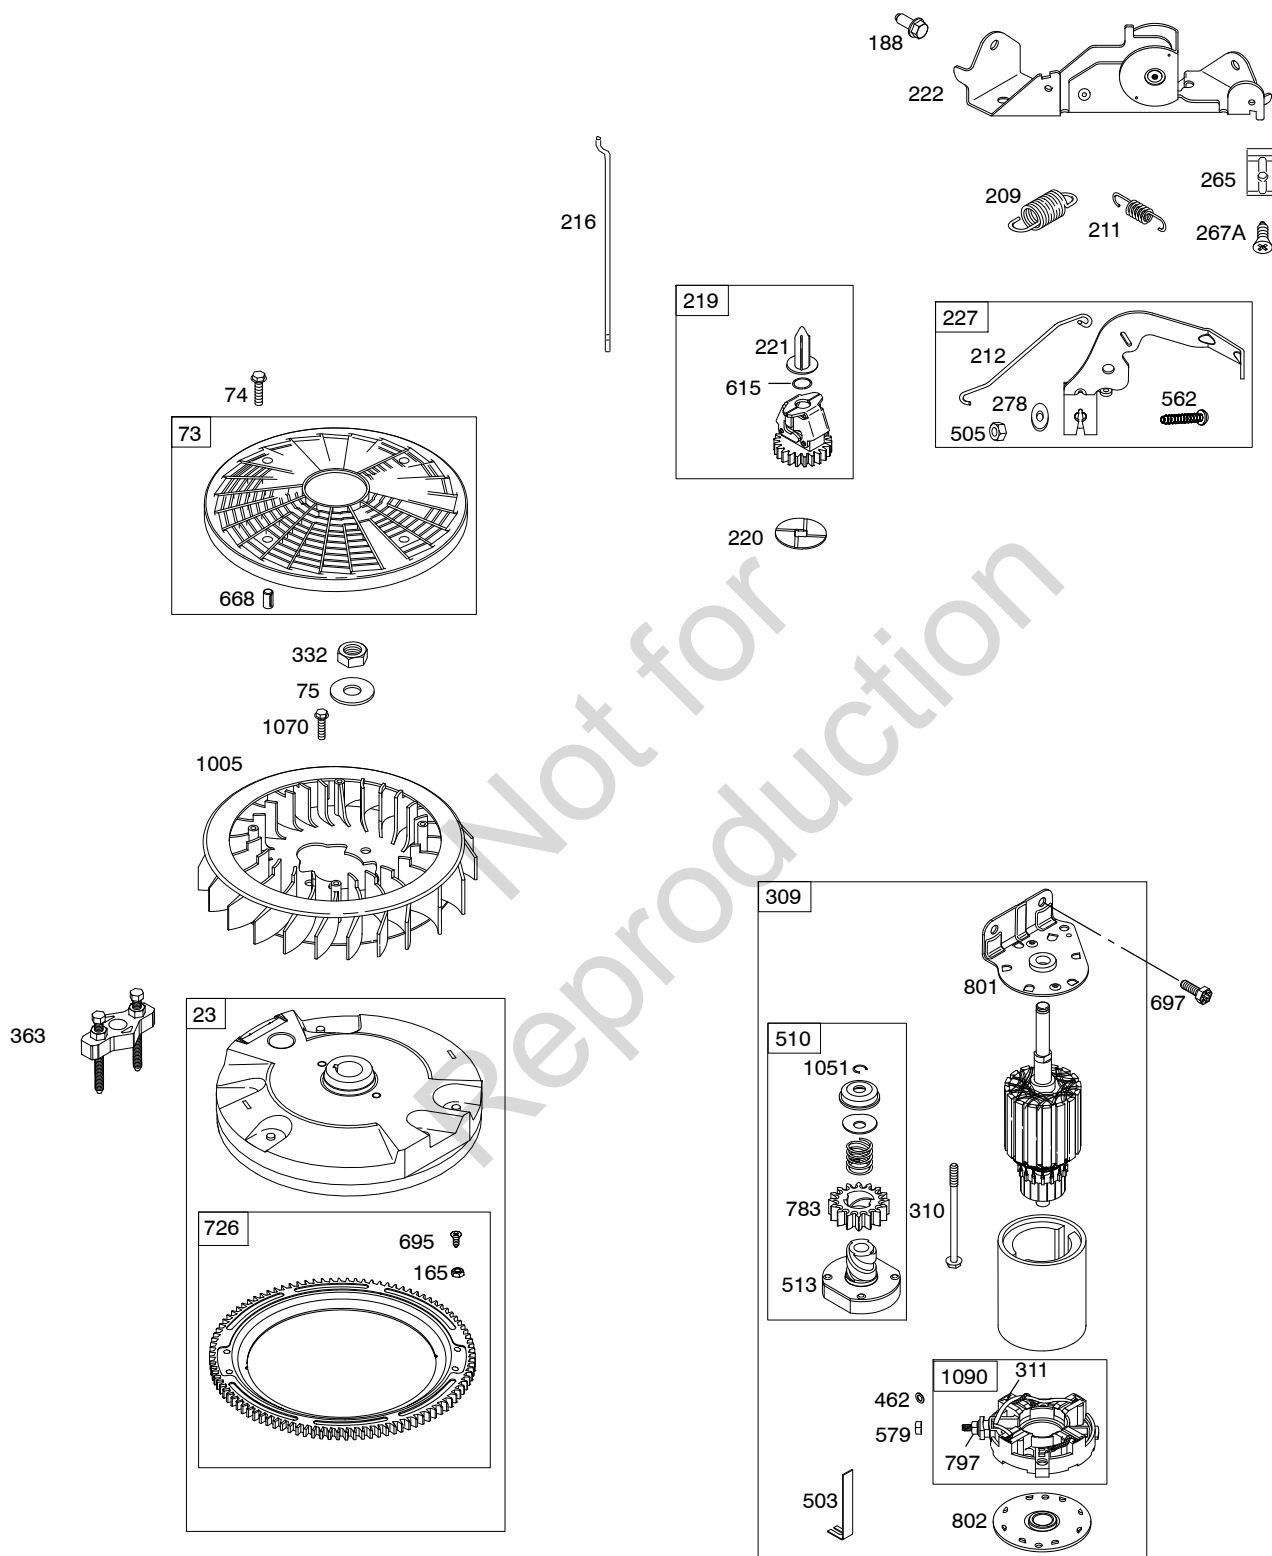 

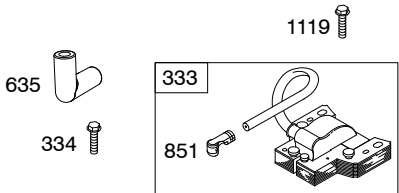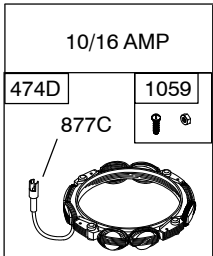  

NOTE: All stators use a No. 1119 mounting screw. 

       NOTE: The proper flywheel part number and/or the alternator magnet size will determine the alternator type or output. See repair instruction manual for additional information.

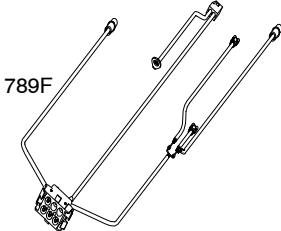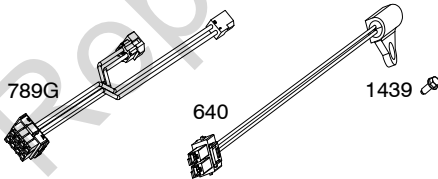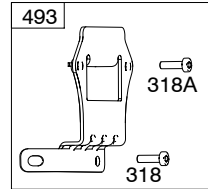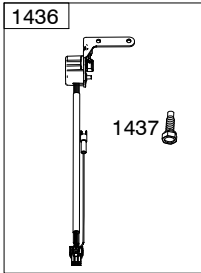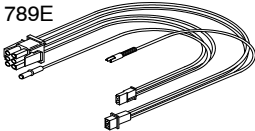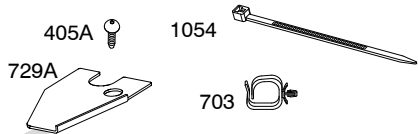

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	796908	Cylinder Assembly	33	793557	Valve-Exhaust	187A	791766	Line-Fuel
2	499585	Kit-Bushing/Seal (Magneto Side)	34	793556	Valve-Intake			(15" Long)(Cut to Required Length)
3	391086s	Seal-Oil (Magneto Side)	35	694865	Spring-Valve (Intake)	188	697551	Screw (Control Bracket)
4	797502	Sump-Engine	36	694865	Spring-Valve (Exhaust)	192	690083	Adjuster-Rocker Arm
5	796270	Head-Cylinder (Cylinder #1)	42	499586	Keeper-Valve	209	796849	Spring-Governor
5A	796271	Head-Cylinder (Cylinder #2)	45	690977	Tappet-Valve	211	796225	Spring-Governed Idle
7	796851	Gasket-Cylinder Head	46	796853	Camshaft	212	695238	Link-Throttle
8	792185	Breather Assembly	50	797503	Manifold-Intake	216	796879	Link-Choke
9	690937	Gasket-Breather	51B	796876	Gasket-Intake	217	695409	Spring-Choke Return
10	697551	Screw (Breather Assembly)	51E	690949	Gasket-Intake	219	793338	Gear-Governor
11	792184	Tube-Breather	53	690951	Stud (Carburetor)	220	690412	Washer (Governor Gear)
12	697227	Gasket-Crankcase	54	699816	Screw (Intake Manifold)	221	841026	Bracket-Control
13	793988	Screw (Cylinder Head)	73	494439	Screen-Rotating	222	796630	Bracket-Control
15A	690946	Plug-Oil Drain	74	698425	Screw (Rotating Screen)	227	796223	Lever-Governor Control
16	796855	Crankshaft Used on Type No(s). 0046.	75	691056	Washer (Flywheel)	231	690718	Screw (Choke Valve)
		----- Note -----	95	690718	Screw (Throttle Valve)	240A	695666	Filter-Fuel
		796857 Crankshaft Used on Type No(s). 0047.	98	699721	Kit-Idle Speed	250	690957	Retainer-Breather
20	795387	Seal-Oil (PTO Side)	104	694918	Pin-Float Hinge	252	794389	Collector-Oil
22	694966	Screw (Crankcase Cover/Sump)	105	797410	Valve-Float Needle	265	691024	Clamp-Casing
23	691053	Flywheel	108	699723	Valve-Choke	267A	695134	Screw (Casing Clamp)
24	796335	Key-Flywheel	117	842633	Jet-Main (Standard)	276A	695410	Washer-Sealing
25	796909	Piston Assembly (Standard)	118	842082	Jet-Main (High Altitude)	278	792651	Washer (Governor Control Lever)
		----- Note -----	121E	796919	Kit-Carburetor Overhaul	287	697820	Screw (Dipstick Tube)
		796910 Piston Assembly (.020" Oversize)	122	796877	Spacer-Carburetor	304C	797407	Housing-Blower
26	796911	Ring Set (Standard)	125E	796870	Carburetor	305	691005	Screw (Blower Housing)
		----- Note -----	130	796875	Valve-Throttle	305B	790690	Screw (Blower Housing to Intake Elbow)
		796912 Ring Set (.020" Oversize)	131	796872	Kit-Throttle Shaft	306	796852	Shield-Cylinder (Cylinder #1)
27	690975	Lock-Piston Pin	133	699724	Float-Carburetor	306A	796541	Shield-Cylinder (Cylinder #2)
28	696581	Pin-Piston	135	699729	Tube-Fuel Transfer	307	691003	Screw (Cylinder Shield)
29	796209	Rod-Connecting	137	690994	Gasket-Float Bowl	307A	697551	Screw (Cylinder Shield)
32	690976	Screw (Connecting Rod)	141	796228	Kit-Choke Shaft	309	795121	Motor-Starter
			142	796871	Nozzle-Carburetor	310	691263	Screw (Starter Motor)
			146	690979	Key-Timing	311	497608	Brush Set
			150	690995	Gasket-Nozzle	318	697551	Screw (Mounting Bracket)
			163	691001	Gasket-Air Cleaner	318A	792629	Screw (Electronic Choke Module To Bracket)
			165	693148	Nut (Ring Gear)	332	691059	Nut (Flywheel)

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

49M800

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
333	691060	Armature-Magneto	573	790444	Plate-Back	801	691283	Cap-Drive
334	691061	Screw (Magneto Armature)	578A	691208	Wire Assembly	802	691286	Cap-End
337	793541	Plug-Spark	579	691029	Nut (Starter Cable)	829	796867	Hose-Oil Cooler
358A	796917	Gasket Set-Engine	601	791850	Clamp-Hose (Green)	842	691031	Seal-O Ring (Dipstick)
363	19203	Puller-Flywheel	----- Note -----			847	499602	Dipstick/Tube Assembly
383	19576S	Wrench-Spark Plug		691038	Clamp-Hose (Black)	850	100106	Sealant-Liquid
385	797409	Screw (Fuel Pump Mounted On Blower Housing)		601B	841597	851	493880s	Terminal-Spark Plug
		----- Note -----	613	690341	Screw (Muffler)	865B	792286	Cover-Air Guide (Valley)
		697551 Screw (Fuel Pump Mounted On Fuel Pump Bracket)	615	698290	Retainer-Governor Shaft	868	690968	Seal-Valve
387	808656	Pump-Fuel	616	691045	Crank-Governor	877B	399916	Wire/Connector- Alternator
400	796862	Cooler-Oil	617	697891	Seal-O Ring (Intake Manifold)	883	690970	Gasket-Exhaust
404	690442	Washer (Governor Crank)	628	697551	Screw (Fuel Pump Bracket)	914	691127	Screw (Rocker Cover)
405A	697820	Screw (Backplate)	633	699813	Seal-Choke/Throttle Shaft	918	793147	Hose-Vacuum
415	794903	Plug	635	692076	Boot-Spark Plug	918A	797408	Hose-Vacuum
418	690999	Plate-Carburetor	640	796913	Wire-Thermistor	943A	796222	Seal-O Ring (Oil Pump Cover)
431D	792297	Elbow-Intake	654	690958	Nut (Carburetor)	947	841546	Solenoid-Fuel
445B	792105	Filter-Air Cleaner Cartridge	668	691215	Spacer	965A	796221	Cover-Oil Pump
447	691003	Screw (Air Guide Cover)	672	690234	Gasket-Carburetor Plate	967B	792303	Filter-Pre Cleaner
448	796865	Bracket-Oil Cooler	691	790574	Seal-Governor Shaft	968	795120	Cover-Air Cleaner
467A	790697	Knob-Air Cleaner	695	693149	Screw (Ring Gear)	975	793592	Bowl-Float
474D	696458	Alternator (10-16 Amp Regulated)	697	791680	Screw (Drive Cap)	987	691000	Seal-Throttle Shaft
493	797176	Bracket-Electronic Choke Module	703	691010	Clip	1005	791236	Fan-Flywheel
501D	691185	Regulator	718	690959	Pin-Locating	1017A	796214	Screen-Oil Pump
505	691029	Nut (Governor Control Lever)	726	499612	Gear-Ring	1022	690971	Gasket-Rocker Cover
510	696541	Drive-Starter	729A	797454	Clip-Wire	1023	793146	Cover-Rocker (Cylinder #1)
513	692024	Clutch-Drive	741	690980	Gear-Timing	1023A	499600	Cover-Rocker (Cylinder #2)
523	691036	Dipstick	742	690328	Retainer-E Ring	1024B	796220	Pump-Oil
524	691032	Seal-Dipstick Tube	750B	796208	Screw (Oil Pump Cover)	1026	690981	Rod-Push (Steel)
525	691037	Tube-Dipstick	783	695708	Gear-Pinion	1026A	690982	Rod-Push (Aluminum)
526B	697551	Screw (Regulator)	788A	793145	Bracket-Fuel Pump	1027	696854	Filter-Oil (Premium)
552	796638	Bushing-Governor Crank	789E	695050	Harness-Wiring	1028	796864	Adapter-Oil Filter
552A	690553	Bushing-Governor Crank	789F	796860	Harness-Wiring	1029	690972	Arm-Rocker (Includes Reference 192)
562	690311	Bolt (Governor Control Lever)	789G	796914	Harness-Wiring	1036		Label-Emissions (Available from a Briggs and Stratton Authorized Dealer)
			797	693167	Nut (Brush Retainer)			
			798	697890	Screw (Rocker Arm)			

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

49M800

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1040	791237	Plate-Trim	1124A	841653	Seal-O Ring (Fuel Transfer Tube)	1374	796863	Seal-O-Ring (Oil Cooler Diverter)
1051	691265	Ring-Retaining	1126	690991	Screw (Fuel Transfer Tube)	1436	796918	Motor-Stepper/ Bracket
1054	280275	Tie-Cable	1127	695407	Screw (Float Bowl)	1437	699891	Screw (Stepper Motor Bracket)
1058	278776	Operator's Manual	1128	690990	Screw (Carburetor Nozzle)	1438	796352S	Module-Electronic Choke
1059	698516	Kit-Screw/Washer	1319	794467	Label-Warning	1439	690365	Screw (Thermistor Wire Assy)
1070	791680	Screw (Flywheel Fan)	1366	796866	Diverter-Oil Cooler			
1090	691293	Retainer-Brush	1373	695629	Screw (Oil Cooler Bracket)			
1095A	796920	Gasket Set-Valve						
1100	791959	Pivot-Rocker Arm						
1119	691183	Screw (Alternator)						
1124	690988	Seal-O Ring (Fuel Transfer Tube)						

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

Not for
Reproduction

